

# CORWITH YARD (SANTA FE)

WHEN ENTERING CORWITH WYE FROM 49<sup>th</sup> ST. LINE,  
CALL CORWITH TOWER (36-36) FOR INSTRUCTIONS.  
AFTER MAKING SET OUT, MUST HAVE PERMISSION  
FROM ASHLAND AVE. YARDMASTER (64-64) TO ENTER  
49<sup>th</sup> STREET LINE TO RETURN TO ASHLAND AVE.

YOU CAN WYE ENGINES AT LANSDALE WITH PERMISSION  
FROM BRC DISPATCHER (26-26). HE WILL ASK YOU TO  
REPORT CLEAR OF JCS RAILROAD. SIGNAL IS AN AUTOMATIC  
SIGNAL THAT WILL GO CLEAR AS YOU APPROACH IT.

LOADING STRIPS ARE 901-101 THRU 907-107. THE  
7 NUMBERS ARE AS YOU ENTER TRACK, AND ROAD  
CROSSING IN MIDDLE IS WHERE THE TRACK BECOMES  
101-102 ETC. ETC. AN ORANGE CONE IN THE MIDDLE OF  
THE TRACK IS THE SAME AS A BLUE LIGHT. STOP AND  
WAIT UNTIL IT IS REMOVED.

THE MAP SHOULD BE FINELY ACCURATE, THEY ARE STILL MAKING CHANGES  
THERE. ANYONE NOTICING ANY CHANGE, CONTACT ME AND IT WILL UPDATE THE

JOHN N. J.  
(111) 47

